

ProHelp® EPM

Production & Process Monitoring System

**Data Exchange Manual
For ProHelp® EPM, Release 7.7**

MANUAL #810-0002

**Revision – T
May 12, 2009**

TABLE OF CONTENTS

1.	Introduction to ProHelp® EPM.....	1-2
1.1	Conventions	1-3
1.1.1	Fields	1-3
1.1.2	Lists	1-4
1.2	Copyright Notice	1-4
1.3	Contacting Mattec.....	1-4
2.	Data Import.....	2-5
2.1	File and Record Format	2-5
2.2	Create or Modify a Tool ID	2-6
2.3	Create or Modify a Part ID	2-7
2.4	Create or Modify a Process Sheet (Basic Information)	2-8
2.5	Create or Modify a Process Sheet (Process-specific Information)	2-10
2.6	Create or Modify a Job Descriptor.....	2-12
2.7	Create or Modify a Father Job Descriptor	2-13
2.8	Delete a Machine Schedule.....	2-14
2.9	Create or Append to a Machine Schedule.....	2-15
2.10	Create or Modify a Material ID	2-16
2.11	Modify Production Data with Packed Parts.....	2-17
2.12	Clear Part ID Material List	2-17
2.13	Create or Modify an Operator ID.....	2-18
3.	Data Export.....	3-19
3.1	Limiting The Amount Of Exported Data.....	3-19
3.2	Weighted Values.....	3-20
3.3	Backward Compatibility	3-20
3.4	Production History Data Export	3-21
3.5	SPC History Data Export.....	3-23
3.6	Job History Data Export	3-24
3.7	Process Sheet Data Export.....	3-26
3.8	Part ID Data Export	3-27
3.9	Tool ID Data Export	3-28
3.10	Operator Tracking Data Export	3-29
3.11	Schedule Summary Data Export.....	3-30
3.12	DTR Data Export.....	3-31
4.	Operation	4-32
5.	Automatic Execution	5-33
5.1	Automatically Run Data Import.....	5-33
5.2	Automatically Run Data Export.....	5-35
5.3	Automatically Run Real-Time Display HTML Export	5-38
5.4	Automatically Run System Reports.....	5-40
6.	Direct Database Operation (Advanced Users Only).....	6-43
6.1	Exporting Data Using Views (Advanced Users Only)	6-44
6.2	Importing Data Using Stored Procedures (Advanced Users Only).....	6-45
6.3	Sample Programs (Advanced Users Only)	6-46
6.3.1	Example 1 – Data Import.....	6-47
6.3.2	Example 2 – Data Export.....	6-48
7.	Compatibility With Older Releases Of Software.....	7-51

1. Introduction to ProHelp® EPM

Mattec Corporation's ProHelp® EPM Production and Process Monitoring System is specifically designed for real-time monitoring of all types of production equipment. It is used extensively in the plastics injection molding, extrusion, blow molding, blown film, metal stamping, die casting, printing, painting, and assembly industries. The basis behind the benefits from the ProHelp® EPM system is the rationale that plant managers and operational people will take corrective actions to solve problems on production equipment when they are aware of such problems. ProHelp® EPM is the device to alert employees to problems immediately when the problems occur. Therefore, tremendous savings can occur in increased productivity and decreased scrap parts.

The ProHelp® EPM system combines computer hardware, computer software, and Machine Interface Units (MIUs) into an efficient system to provide real-time production monitoring, production reports, process alarms, plant scheduling aids, and SPC process and part capability analysis. Floor personnel can make use of the machine-mounted terminals to signal different departments for help, to view production results at the machine site, and to enter downtime reasons or scrap reasons. Production, downtime, and scrap reports may be generated on a shift and daily basis, or the user may generate these reports for extended time periods by specifying a start and end date for the desired report. Job history data is continuously summarized and available for management's review.

This manual describes the ProHelp® EPM facilities that support the sharing of data with other computer systems or applications. Each of these facilities accomplishes its task by reading or writing to a file system accessible to the user. ProHelp® EPM utilizes the Microsoft Windows Server 2003 operating system and the Microsoft SQL Server 2005 database. Users may connect to the system from most Microsoft Windows operating systems. As a result, ProHelp® EPM is quite powerful in its ability to share information with external systems.

Three facilities are described here:

Data Import

This optional feature is, for historical reasons, often referred to as "Download". It allows Tool IDs, Part IDs, Process Sheets, Job Descriptors, and Machine Schedules to be imported into ProHelp® EPM from an external database. The format for data import is a MATTEC-defined, delimited ASCII file. Reference Section 2 for additional information.

Data Export

This optional feature allows raw data from Production History, SPC History, Job Descriptors, Process Sheets, Part IDs, and Tool IDs to be exported from ProHelp® EPM. Reference Section 2.10 for additional information.

DTR Data Export

This optional feature allows the ProHelp® EPM system to be easily integrated with DTR Software International's *The Manufacturing Manager*™ (TMM) software. Reference Section 3.12 for additional information.

1.1 Conventions

1.1.1 Fields

Much of this document consists of record descriptions, which in turn consist of field descriptions. Fields are identified by their position in the record and the sequence of the field descriptions reflects that. Required fields for Data Import are indicated by “(required)” in the “FIELD” column.

In addition to its position or name, each field entry includes a type, format, and description. A field’s type may be one of the following:

FIELD TYPE	DESCRIPTION	EXAMPLES
Alphanumeric	Text that is a combination of letters, numbers, or both. When exported as “Fixed-length Data”, alphanumeric fields will have trailing spaces, if necessary.	abc 123 abc123
Float	A "real number" that may include decimal places. When exported as “Fixed-length Data”, float fields will be a total of 20 characters, including the sign (if needed) and the decimal place.	1.23 1.00 1
Integer	A "whole number" that may not include decimal places. When exported as “Fixed-length Data”, integer values will be a total of 10 characters.	1 23 456
Date	The month, day, and 4-digit year, in the form MM/DD/YYYY, DD/MM/YYYY, or YYYY/MM/DD, depending upon System Configuration ("Units" tab). A 4-digit year is required. When data is output using Data Export, the date delimiter will either be a "/" or ".", depending upon System Configuration. When exported as “Fixed-length Data”, date fields will have 10 characters with leading 0’s, if necessary.	08/18/1999 12/31/2001 01/02/2003
Time	The time of day, using a 24-hour clock. Specified in the format hh:mm, where <i>hh</i> = hours using the 24-hour clock and <i>mm</i> = minutes. One or two digits are accepted for hours (hh), however, two digits are always required for minutes (mm). When data is output using Data Export, the time delimiter will either be a ":" or ".", depending upon System Configuration. When exported as “Fixed-length Data”, time fields will have 5 characters with leading 0’s, if necessary.	00:30 01:15 23:59 01:02

1.1.2 Lists

Some fields or groups of fields are allowed to appear multiple times in a record. Lists appear between two tildes (~). The tildes are required wherever a list is supported even if there is only a single entry or the list is empty.

1.2 Copyright Notice

The Data Import / Export program, the DTR Data Export program, database stored procedures, database views, and other related utilities are protected by copyright law and international treaties. Unauthorized reproduction or distribution of this program or related tools and utilities, or any portion thereof, may result in severe civil or criminal penalties, and will be prosecuted to the maximum extent possible under law.

It is a violation of Mattec's copyright to use the Data Import / Export program, related database stored procedures, related database views, or other related utilities without purchasing the Data Import / Export Option from Mattec Corporation.

It is a violation of Mattec's copyright to use the DTR Data Export program, related database stored procedures, related database views, or other related utilities without purchasing the DTR Data Export Option from Mattec Corporation.

1.3 Contacting Mattec

Before executing Data Import, Data Export, or the DTR Data Export you must purchase the Data Import / Export option and/or the DTR Data Export option from Mattec Corporation. For additional information, please contact Mattec's Sales Department at (800) 966-1301.

It is easiest to obtain technical support by visiting Mattec's website at <http://www.mattec.com> or by emailing the help desk at helpdesk@mattec.com.

2. Data Import

The optional Data Import program provides a means for transferring Tool IDs, Part IDs, Process Sheets, Job Descriptors, and Machine Schedules from an external system, such as a mainframe, into ProHelp® EPM. This program reads an appropriately formatted ASCII text file and uses the information it contains to create or modify data. If errors are encountered during processing, ProHelp® EPM generates an error report and the user is notified.

2.1 File and Record Format

Each record in the ASCII file is essentially an action request and causes specific functions to occur during processing of that record by ProHelp® EPM. Several such actions may be requested:

SUGGESTED ORDER	ACTION	REQUEST CODE
1	Create or modify a Tool ID. Refer to Section 2.2.	TI630
2	Create or modify a Part ID. Refer to Section 2.3.	PI630
3	Create or modify a Process Sheet (basic information). Refer to Section 2.4.	PP630
4	Create or modify a Process Sheet (process-specific information). Refer to Section 2.5.	PE630
5	Create or modify a Job Descriptor. Refer to Section 2.6.	JB630
6	Create or modify a Father Job Descriptor. Refer to Section 2.7.	JF630
7	Delete a Machine Schedule. Refer to Section 2.8.	SD630
8	Create or append to a Machine Schedule. Refer to Section 2.9.	SA630
9	Create or modify a Material ID. Refer to Section 2.10	MI
10	Modify Production Data with Packed Parts	PK

The suggested order takes into account dependencies between the various actions. For example, a PE (Process Sheet, process-specific information) record can only include existing process sheets, including those created by PP records in the same file; before a PP or PE record can reference a Tool ID or Part ID, the Tool ID and Part ID must already exist, and so forth.

All types of records need not be present in the file. For example, if a record requests the creation of a Process Sheet (PP/PE) using Part ID "123", and ProHelp® EPM already has a record for Part ID "123", then there is no need to precede the request with a Part ID (PI) creation request.

All fields within a record are separated by commas (","). All records must be terminated with a carriage return and line feed. The first field of each line always consists of one of the two-character request codes listed above.

Character fields can optionally be included in double quotes (" "). However, single quotes (' ') may not be used. Because of this, it is preferred that you do NOT use quote marks at all.

2.2 Create or Modify a Tool ID

The Tool ID action request record consists of a five-character request code (TI630), the name of the Tool Number, and additional fields as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (TI630).
2 (required)	Alphanumeric	20	The name of the Tool Number.
3	Integer		Total cavities for the tool.
4	Float		Runner weight specified in grams.
5	Alphanumeric	50	Description.
6	Integer		The setup time for the tool specified in minutes.
7	Integer		The teardown time for the tool specified in minutes.
8	Integer		Active Flag (0 = inactive, 1 = active)

Optional fields may be omitted though the field separators (commas) are required unless they are at the end of the record. If an optional field is omitted and the Tool ID record already exists, the field is not modified. If an optional field is omitted and the Tool ID record does not already exist, the field is set to blanks (Alphanumeric type) or 0 (Integer or Float types).

The "Last Update" field for the Tool ID will be automatically updated with the current date and time. Other fields in the Tool ID record will not be modified.

Examples:

```
TI630,Tool1,3,4.5,My Tool,60  
TI630,Tool2,3,3,Another Tool
```

2.3 Create or Modify a Part ID

The Part ID action request record consists of the five-character request code (PI630), the name of the Part Number, and additional fields as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (PI630).
2 (required)	Alphanumeric	25	The name of the Part Number.
3	Float		Percent regrind.
4	Float		Part cost.
5	Float		Material cost.
6	Alphanumeric	50	Description.
7	Integer		Parts per case.
8	Float		Setup material weight in Material Weight Units as defined in System Configuration.
9	Integer		Material color rating.
10	List	2 fields	
10a	Alphanumeric	22	Material ID
10b	Float		Material weight in Part Weight Units as defined in System Configuration.
11	Integer		Active Flag (0 = inactive, 1 = active)

Optional fields may be omitted though the field separators (commas) are required unless they are at the end of the record. If an optional field is omitted and the Part ID record already exists, the field is not modified. If an optional field is omitted and the Part ID record does not already exist, the field is set to blanks (Alphanumeric type) or 0 (Integer or Float types). A Material ID and Material Weight field exists for each material. The list of materials begins and ends with a tilde (~). If no previously defined material information exists, the first material in the list is considered "Primary".

The "Last Update" field for the Part ID will be automatically updated with the current date and time. Other fields in the Part ID record will not be modified.

Examples:

PI630,Part1,10.1,2,3,FOUR,1000

PI630,Part2,4,5.6,7.8,Round,12,9.1,30,~Mat1,2.3,Mat2,4.5~

2.4 Create or Modify a Process Sheet (Basic Information)

The Process Sheet (Basic Information) action request record consists of the five-character request code (PP630), the name of the Machine Number, the name of the Tool Number, the name of the Part Number, and additional fields as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (PP630).
2 (required)	Alphanumeric	6	The name of the Machine Number.
3 (required)	Alphanumeric	20	The name of the Tool Number.
4 (required)	Alphanumeric	25	The name of the Part Number.
5 (*)	Float		Expected percent up.
6 (*)	Float		Expected cycle time. This must be specified in the appropriate native units for the machine (e.g., seconds, cycles, meters).
7 (*)	Float		Expected percent good.
8	Float		Labor hour factor.
9	Float		Labor cost.
10	Alphanumeric	30	Description 1.
11	Alphanumeric	30	Description 2.
12 (*)	Float		Non-production limit specified in seconds.
13	Float		Number of Setup Operators Required
14	Integer		Automatic SPC Enable (0 = off, 1 = on)
15	Integer		Automatic SPC Period in minutes
16	Integer		Part Qualification Enable (0 = off, 1 = on)
17	Integer		Automatic SPC Sub-Group Size
18	Integer		Active Flag (0 = inactive, 1 = active)

* - This field is required if this is a new record, otherwise, the field is optional.

Optional fields may be omitted though the field separators (commas) are required unless they are at the end of the record. If an optional field is omitted and the Process Sheet record already exists, the field is not modified. If an optional field is omitted and the Process Sheet record does not already exist, the field is set to blanks (Alphanumeric type) or 0 (Integer or Float types).

The "Last Update" field for the Process Sheet will be automatically updated with the current date and time. Other fields in the Process Sheet record will not be modified.

When creating a Process Sheet, you must have one PP630 action request and multiple PE630 action requests, one for every parameter that is defined in the machine's configuration. The PP630 action request must be executed before the PE630 action request.

Note: If the PP630 and PE630 action requests are not done properly, the user will not be able to edit the Process Sheet via Edit Facilities. The Process Sheet record must be corrected using valid PP630 and PE630 action requests before Edit Facilities will work properly. In particular, the PE630 requests must correspond precisely with the parameter numbers that are defined in the machine's configuration program. Reference Section 2.5 for additional information.

Examples:

PP630,Mach1,Tool1,Part1,99,10.5,94,1.5,4.53,Description1,Description2,30.0
PP630,01,123501,124F-13,98.5,10,94.5

2.5 Create or Modify a Process Sheet (Process-specific Information)

The Process Sheet (Process-specific Information) action request record consists of the five-character request code (PE630), the name of the Machine Number, the name of the Tool Number, the name of the Part Number, and additional fields as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (PE630).
2 (required)	Alphanumeric	6	The name of the Machine Number.
3 (required)	Alphanumeric	20	The name of the Tool Number.
4 (required)	Alphanumeric	25	The name of the Part Number.
5 (required)	Integer		The parameter number. This number may have the values 0-63 and must correspond precisely with the parameters that are defined in the machine's configuration (and stored in the dbo.MachParm table in the field ParmNo).
6	Float		The parameter's upper limit.
7	Float		The parameter's nominal value. This value may not exceed the parameter's upper limit or be below the parameter's lower limit.
8	Float		The parameter's lower limit.
9	Float		The parameter's delay value in seconds.
10	Integer		Spc Enable (0 = off, 1 = on)
11	Integer		Spc Control Alarm (0 = off, 1 = on)
12	Integer		Spc Run Alarm (0 = off, 1 = on)
13	Integer		Process Specification Alarm (0 = off, 1 = on)
14	Integer		Process Control Alarm (0 = off, 1 = on)
15	Integer		Part Qualification Specification Enable (0 = off, 1 = on)
16	Integer		Part Qualification Control Enable (0 = off, 1 = on)

Optional fields may be omitted though the field separators (commas) are required unless they are at the end of the record. Any fields not present in the record are set to 0 (Integer or Float types).

The "Last Update" field for the Process Sheet will be automatically updated with the current date and time. Other fields in the Process Sheet record will not be modified.

When creating a Process Sheet, you must have one PP630 action request and multiple PE630 action requests, one for every parameter that is defined in the machine's configuration. The PP630 action request must be executed before the PE630 action request.

Note: If the PP630 and PE630 action requests are not done properly, the user will not be able to edit the Process Sheet via Edit Facilities. The Process Sheet record must be corrected using valid PP630 and PE630 action requests before Edit Facilities will work properly. In particular, the PE630 requests must correspond precisely with the parameter numbers that are defined in the machine's configuration program (and stored in the MachParm database table).

Examples:

PE630,01,Tool1,Part1,0,10,9.5,9

PE630,01,Tool1,Part2,5,21,20.5,20

PE630,01,Tool1,Part3,60,21.3,21.2,21.1

2.6 Create or Modify a Job Descriptor

The Job Descriptor action request record consists of the five-character request code (JB630), the name of the Job Number, the name of the Machine Number, the name of the Tool Number, the name of the Part Number, and additional fields as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (JB630).
2 (required)	Alphanumeric	20	The name of the production Job Number.
3 (required)	Alphanumeric	6	The name of the Machine Number.
4 (required)	Alphanumeric	20	The name of the Tool Number.
5 (required)	Alphanumeric	25	The name of the Part Number.
6 (required)	Date	10	The job's desired start date.
7	Time	5	The job's desired start time.
8 (required)	Date	10	The job's desired stop date.
9	Time	5	The job's desired stop time.
10 (required)	Integer		The lot size.
11	Alphanumeric	18	The name of the Customer.
12	Alphanumeric	30	Comment 1.
13	Alphanumeric	30	Comment 2.
14	Alphanumeric	6	Sequence Number of this job within a Work Order.

Optional fields may be omitted though the field separators (commas) are required unless they are at the end of the record.

The Job Descriptor action request may be used to create “Bachelor” or “Son” jobs. “Father” jobs should be created using the Father Job Descriptor action request (JF630).

The Job Number that is specified must be a unique identifier for this job. Although ProHelp® EPM supports non-unique Job Numbers (that is, multiple Job Descriptors with the same Job Number), the Data Import function requires unique Job Numbers.

The following describe the action that is taken for the "JB630" action request:

- If the specified Job Descriptor doesn't exist, the job will be created. It may then be scheduled using an Append to Machine Schedule (“SA630”) request.
- If the specified Job Descriptor exists, all fields except the Machine Number, Tool Number, and Part Number will be updated. Any fields not present in the record are set to blanks (Alphanumeric) or 0 (Integer or Float types).

Examples:

```
JB630,Job1,Mach1,Tool1,Part1,01/31/2001,23:01,12/31/2003,03:59,1000,cust1,comment 1,c2
JB630,2-CHR,Mach1,Tool1,Part2,12/15/2001,12:00,12/25/2001,12:00,1500
```

2.7 Create or Modify a Father Job Descriptor

The Father Job Descriptor action request record consists of the two-character request code (JF630), the name of the Father Job Number, the name of the Tool Number (optional), and additional fields as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (JF630).
2 (required)	Alphanumeric	20	The name of the Father Job Number.
3	Alphanumeric	20	The name of the Father Tool Number.
4 (required)	Integer		The number of "active components" to start when the job runs. A value between 1 and 100 is required.
5-1005	Alphanumeric	20	The name of an existing "bachelor" job that will be "adopted" into this family job.

Optional fields may be omitted though the field separators (commas) are required unless they are at the end of the record.

The Father Job Number and all "Bachelor" Job Numbers that are specified must be unique identifiers for these jobs. Although ProHelp® EPM supports non-unique Job Numbers (that is, multiple Job Descriptors with the same Job Number), the Data Import function requires unique Job Numbers.

The following describe the action that is taken for the "JF630" action request:

- If the specified Father Job Descriptor doesn't exist, the job will be created. If the specified Father Job Descriptor exists, all fields will be updated.
- Each existing "Bachelor" Job Descriptor will be "adopted" into the family job. At this point, these jobs become "Son" Jobs.
- The individual Son Jobs may then be scheduled using an Append to Machine Schedule ("SA630") request.

Examples:

```
JF630,FatherJob1,Tool1,2,Son1,Son2,Son3  
JF630,FatherJob2,,2,SonA,SonB,SonC
```

2.8 Delete a Machine Schedule

The Delete Machine Schedule action request record consists of the two-character request code (SD630) and the name of the Machine Number. Job Descriptors that are scheduled on the current machine are deleted from the machine's schedule (except for the currently running job).

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (SD630).
2 (required)	Alphanumeric	6	The name of the Machine Number.

The Delete Machine Schedule action request can be used in combination with one or more Machine Schedule action requests (SA630) to rewrite a machine's schedule.

Examples:

```
SD630,Mach1  
SA630,Mach1,Job1  
SA630,Mach1,Job2
```

2.9 Create or Append to a Machine Schedule

The Machine Schedule action request record consists of the two-character request code (SA630), the name of the Machine Number, and the name of the Job Number to be scheduled.

The Job Number in the action request record is appended to the end of the current schedule. If the Job Number is already scheduled, or if the job is currently running, the action request is aborted and an error is reported.

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (SA630).
2 (required)	Alphanumeric	6	The name of the Machine Number.
3 (required)	Alphanumeric	20	The name of the production Job Number.

Machine Schedule action requests may only contain jobs for which Job Descriptors already exist. The Job Descriptor may have just been created using a previous Job Descriptor action request (JB630).

The Job Number that is specified must be a unique identifier for this job. Although ProHelp® EPM supports non-unique Job Number (that is, multiple Job Numbers with the same name), the Data Import function requires unique Job Numbers.

The Job Number that is specified must be an existing “Bachelor” job or an existing “Son” job. “Father” (Family) jobs may not be scheduled using this action request. Rather, each Son job that is a member of the family job should be scheduled, in order, using Machine Schedule action requests.

Examples:

```
SA630,Mach1,Job1  
SA630,Mach1,Job2
```

2.10 Create or Modify a Material ID

The Material ID action request record consists of the five-character request code (MI630), the name of the Material, and additional fields as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (MI710).
2 (required)	Alphanumeric	22	The material identifier.
3 (required)	Integer		Material type. (0 = Standard, 1 = Auxiliary)
4	Float		Material cost.
5	Alphanumeric	10	Auxiliary Units.
6	Alphanumeric	30	Description (Comment) 1.
7	Alphanumeric	30	Description (Comment) 2.
8	Alphanumeric	20	Material Description

Optional fields may be omitted though the field separators (commas) are required unless they are at the end of the record. If an optional field is omitted and the Material ID record already exists, the field is not modified. If an optional field is omitted and the Material ID record does not already exist, the field is set to blanks (Alphanumeric type) or 0 (Integer or Float types).

The "Last Update" field for the Material ID will be automatically updated with the current date and time. Other fields in the Material ID record will not be modified.

Examples:

```
MI710,Mat1,0,4.5  
MI710,Mat2,1,1.3,each,red,box  
MI710,Mat3,0,7.25,,dark,green,soft
```

2.11 Modify Production Data with Packed Parts

The Packed Parts action request record consists of the five-character request code (PK760) and additional fields as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (PK760).
2 (required)	Alphanumeric	20	The job identifier.
3 (required)	Date	10	Date of production. (0 = Standard, 1 = Auxiliary)
4 (required)	Alphanumeric	2	Shift of production.
5 (required)	Float		Amount of production packed.
6	Integer		Production Quantity Units (PQU) (0 = Parts, 1 = Cases).

Optional fields may be omitted though the field separators (commas) are required unless they are at the end of the record.

Examples:

```
PK760,Job01,4/10/2008,1,12,1  
PK760,Job09,3/3/2008,A,2000
```

2.12 Clear Part ID Material List

The Clear Part ID Material List action request record consists of the five-character request code (MC770) and the name of the Part Number as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (PI630).
2 (required)	Alphanumeric	25	The name of the Part Number.

This operation will delete all Material List entries for the specified Part ID. Its purpose is to clear a list in anticipation of a following Import Part ID operation that establishes a new Material List. It is not required to add a material to an existing list or to alter the weight field of an existing list entry.

Examples:

```
MC770,Part1
```

2.13 Create or Modify an Operator ID

The Operator ID action request record consists of the five-character request code (OI770), the Operator Identifier, and additional fields as defined below:

FIELD	TYPE	LENGTH	DESCRIPTION
1 (required)	Alphanumeric	5	The request code (OI770).
2 (required)	Alphanumeric	18	The operator identifier.
3	Alphanumeric	18	Password
4	Alphanumeric	35	Description
5	Alphanumeric	35	Work Location
6	Integer	1	Active Flag (0 = inactive, 1 = active)
7	Integer	1	Scrap Permission (0 = off, 1 = on)
8	Integer	1	Down Reason Permission (0 = off, 1 = on)
9	Integer	1	Help Permission (0 = off, 1 = on)
10	Integer	1	Job Control Permission (0 = off, 1 = on)
11	Integer	1	Next Job Control Permission (0 = off, 1 = on)
12	Integer	1	Manual SQC Permission (0 = off, 1 = on)
13	Integer	1	Variable SQC Permission (0 = off, 1 = on)
14	Integer	1	Attribute SQC Permission (0 = off, 1 = on)
15	Integer	1	Material Lot Permission (0 = off, 1 = on)
16	Integer	1	Setup Material Permission (0 = off, 1 = on)
17	Integer	1	Active Cavities Permission (0 = off, 1 = on)
18	Integer	1	Percent Regrind Permission (0 = off, 1 = on)
19	Integer	1	Save Profile Permission (0 = off, 1 = on)
20	Integer	1	Analog Calibration Permission (0 = off, 1 = on)
21	Integer	1	Machine PM Permission (0 = off, 1 = on)
22	Integer	1	Tool PM Permission (0 = off, 1 = on)
23	Integer	1	Language Select Permission (0 = off, 1 = on)
24	Integer	1	Preferences Permission (0 = off, 1 = on)

Optional fields may be omitted though the field separators (commas) are required unless they are at the end of the record. If an optional field is omitted and the Operator ID record already exists, the field is not modified. If an optional field is omitted and the Operator ID record does not already exist, the field is set to blanks (Alphanumeric type) or 0 (Integer or Float types). The password is an exception. If omitted and the Operator ID record does not exist, it is set to an unusable value. If the MIU Security option is present, a password must then be established through System Configuration before the operator can log in.

The "Last Update" field for the Operator ID will be automatically updated with the current date and time. Other fields in the Operator ID record will not be modified.

Examples:

`OI770,Opey,123abc,short,basement,1,1,0,1,0,1,0,1,0,1,0,1,0,1,0,1,0,1,0`

3. Data Export

The Data Export program is actually comprised of many separate programs that allow the user to export the following information:

DATA EXPORT TYPE
Production History. Refer to Section 3.4.
SPC History. Refer to Section 3.5.
Job Descriptor information. Refer to Section 3.6.
Process Sheet information. Refer to Section 3.7.
Part ID Information. Refer to Section 3.8.
Tool ID information. Refer to Section 3.9.
Operator Tracking Information. Refer to Section 3.10.
Schedule Information. Refer to Section 3.11.
DTR data export. Refer to Section 3.12.

The following sections describe each of these Data Export programs.

3.1 Limiting The Amount Of Exported Data

When you select to export Production History data and specify the "Specific Shift" filter, the "Shift" that is displayed always includes the numbers 1-10. These correspond to the internal "ShiftSeq" field that is used in the database (ShiftProd.ShiftSeq), where "1" represents the first shift of the specified day, "2" represents the second shift of the specified day, etc.

These numbers are not the "Shift Name" that is specified in the Shift Boundaries Edit Facilities program.

3.2 Weighted Values

Weighted values apply primarily to the Production History data export (Section 3.4) and the Job Descriptor data export (Section 3.6).

Weighted values are used for family molding. Weighted values are stored for bachelor jobs, but the weighted value (e.g., weighted down time) will contain the same value as the non-weighted value (e.g., down time).

When considering family molding, however, weighted values are very important. These values allow for the display of overall family-specific information.

Consider this example: Component jobs “son1” and “son2” ran for 8 hours at the same time. These are related family jobs. A production report would display 8 hours of run time for “son1” and 8 hours of run time for “son2”. However, the total and grand total for the report would show only 8 hours of run time, not 16 hours of run time. That’s because the family only ran for 8 hours.

If you looked at the raw data, the Production History database table would contain 8 hours of total time for “son1” and 4 hours of weighted total time for “son1”. The same would be true for “son2”. Thus, the detail records in the report would display total time, whereas the total lines would display the sum of the weighted total times.

(Some people want to see the sum of the non-weighted values in the totals and grand totals displays. Thus, in the example above, the report would display 8 hours of run time for “son1”, 8 hours of run time for “son2”, and 16 hours of total run time. Obviously this can be accomplished by displaying the sum of the non-weighted total times.)

Weighted values are accumulated in real-time and vary depending on the number of son jobs that are currently running for the family. Thus, if two son jobs are running, each job gets ½ of the run time (actually total time), down time, etc. stored in its weighted values. If three son jobs are running, each job gets a 1/3rd weighting, etc.

3.3 Backward Compatibility

With each release of ProHelp® EPM, new data fields may appear and others become obsolete and disappear. To ease the transition to newer releases, the Data Export function allows the user to select either the current format or certain older formats for exported data. It is not guaranteed that every format will always be supported but every attempt is made to offer at least one previous format along with the current one.

The available choices vary by the type of data being exported. The Data Export feature first appeared in ProHelp® EPM Release 6.2.0 so no prior releases will ever appear as compatibility choices. If no changes have occurred for a particular data type since Release 6.2.0, then the only choice is “Current Release”.

3.4 Production History Data Export

The Production History data export selection allows the user to export production-related information by shift. This program can be useful for updating external systems with production-related information for jobs by shift, including the number of parts produced for a shift and the number of packed parts for a shift.

The Production History data export is very similar to the Job History data export. The Production History selection exports data by shift, whereas the Job History selection exports data for the entire job. Data may be exported for the current day, previous day, or a date/shift range for one or all departments.

The following table describes the fields that are exported in the Production History data export program:

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
1	JobID	Alphanumeric (20)	JobQueue	The name of the Job Number.
2	MachID	Alphanumeric (6)	MachCon	The name of the Machine Number.
3	PartID	Alphanumeric (25)	PartIDs	The name of the Part Number.
4	MoldID	Alphanumeric (20)	MoldIDs	The name of the Tool Number.
5	CustomerID	Alphanumeric (18)	JobQueue	The name of the Customer.
6	Shift Date	Date	ShiftProd	The date of the shift.
7	Shift Index	Integer	ShiftProd	The shift index for the day. The first shift of the production day is 1. Values can range from 1-10.
8	Shift Name	Alphanumeric (2)	ShiftProd	The name (tag) of the shift.
9	CycCnt	Integer	ShiftProd	Total number of machine cycles for the shift.
10	WtCycCnt	Float	ShiftProd	The "weighted" total number of machine cycles for the shift. See Section 3.2.
11	CycOutSpec	Integer	ShiftProd	Total number of out-of-spec cycles for the shift. Any cycle in which one or more process parameters are out-of-spec is an out-of-spec cycle.
12	ExpProdQty	Float	ShiftProd	Expected number of parts to be produced based on information in the process sheet.
13	CalProdQty	Float	ShiftProd	The total number of parts produced for the shift as monitored by the MIU.
14	PakProdQty	Float	ShiftProd	Packed parts reported for the shift.
15	DefectQty	Float	ShiftProd	Scrap parts reported for the shift.

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
16	TotTime	Integer	ShiftProd	Total time (run time plus down time) in seconds for the shift.
17	WtTotTime	Float	ShiftProd	The "weighted" total time in seconds for the shift. See Section 3.2.
18	DownTime	Integer	ShiftProd	Down time in seconds for the shift.
19	WtDownTime	Float	ShiftProd	The "weighted" down time in seconds for the shift. See Section 3.2.
20	NumDownTm	Integer	ShiftProd	The number of downtime occurrences for the shift.
21	WtNumDown Tm	Float	ShiftProd	The "weighted" number of downtime occurrences for the shift. See Section 3.2.
22	LaborTime	Integer	ShiftProd	Amount of labor time in seconds calculated for the shift.
23	WtLaborTime	Float	ShiftProd	The "weighted" amount of labor time in seconds calculated for the shift. See Section 3.2.
24	MinCycTm	Float	ShiftProd	Minimum cycle time value that occurred during the shift.
25	MaxCycTm	Float	ShiftProd	Maximum cycle time value that occurred during the shift.
26	SumCycTm	Float	ShiftProd	Sum of the cycle time values that occurred during the shift. Useful in calculating the average for cycle time.
27	SumSqCycTm	Float	ShiftProd	Sum of the squares of the cycle time values that occurred during the shift. Useful in calculating the standard deviation for cycle time.
28	NumCavs	Float	MoldIDs	The total cavities for the tool.
29	PctReg	Float	PartIDs	Percentage regrind of total for the material.
30	PcsPerCtn	Float	PartIDs	Pieces per carton or box.
31	PartCost	Float	PartIDs	Part cost in \$ per unit.
32	MatlCost	Float	PartIDs	Material cost in \$ per unit.
33	ActCavs	Float	JobProd	Currently active cavities.
34	DownQty	Integer	ShiftDown	Downtime seconds for reason 1.
35	DownCnt	Integer	ShiftDown	Number of reason 1 occurrences.
36 . . . 73				Downtime seconds and occurrences (alternating) for reasons 2 through 20.
74 . . 93	ScrapQty	Float	ShiftDefect	Scrap quantity for reasons 1 through 20.

3.5 SPC History Data Export

The SPC History data export selection allows the user to export information about Automatic SPC. This program can be useful for updating external systems with SPC data that has been collected by an MIU. Data may be exported for the current day, previous day, or a date range for one or all departments.

The following table describes the fields that are exported in the SPC History data export program:

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
1	MachID	Alphanumeric (6)	MachCon	The name of the Machine Number.
2	JobID	Alphanumeric (20)	JobQueue	The name of the Job Number.
3	Name	Alphanumeric (10)	ParmSet	The name of the Parameter.
4	Sample Date	Date	LongTermEng	The date the sample was taken.
5	Sample Time	Time	LongTermEng	The time the sample was taken.
6	ParmNo	Integer	LongTermEng	The zero-based parameter number.
7	LtCycleIndex	Integer	LongTermEng	The long-term cycle index for each period (0 for the first cycle, up to "N-1", where N is the subgroup size).
8	Value	Float	LongTermEng	The process parameter value.
9	Flag	Alphanumeric (1)	LongTermEng	A flag indicating the status of this particular sample, where: <ul style="list-style-type: none"> • ‘.’ is in spec; • ‘-’ is below lower spec, • ‘+’ is above upper spec, • ‘x’ is invalid parameter value (unable to calculate), • ‘?’ is unknown.

3.6 Job History Data Export

The Job History data export selection allows the user to export information about all jobs that have been run. Data for running, suspended, and completed jobs is included in the data export. This program can be useful for updating external systems with production-related information for jobs, including the total number of parts produced and the total number of packed parts.

The Job History data export is very similar to the Production History data export. The Job History selection exports data for the entire job, whereas the Production History selection exports data by shift.

The following table describes the fields that are exported in the Job History data export program:

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
1	JobID	Alphanumeric (20)	JobQueue	The name of the Job Number.
2	MachID	Alphanumeric (6)	MachCon	The name of the Machine Number.
3	PartID	Alphanumeric (25)	PartIDs	The name of the Part Number.
4	MoldID	Alphanumeric (20)	MoldIDs	The name of the Tool Number.
5	CustomerID	Alphanumeric (18)	JobQueue	The name of the Customer.
6	StartDate	Date	JobQueue	The job's actual start date.
7	StartTime	Time	JobQueue	The job's actual start time in the format hh:mm.
8	StopDate	Date	JobQueue	The job's actual stop date. If the job has not ended yet, the value 0/0/0 will be used.
9	StopTime	Time	JobQueue	The job's actual stop time in the format hh:mm or hh.mm. If the job has not ended yet, the value 0:0 will be used.
10	SchedQty	Integer	JobQueue	The lot size.
11	CycCnt	Integer	JobProd	Total number of machine cycles for the job.
12	WtCycCount	Float	JobProd	The "weighted" total number of machine cycles for the job.
13	CycOutSpec	Integer	JobProd	Total number of out-of-spec cycles for the job. Any cycle in which one or more process parameters are out-of-spec is an out-of-spec cycle.
14	ExpProdQty	Integer	JobProd	Expected number of parts to be produced based on information in the process sheet.
15	CalProdQty	Integer	JobProd	The total number of parts produced for the job as monitored by the MIU.

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
16	PakProdQty	Integer	JobProd	Packed parts reported for the job.
17	DefectQty	Integer	JobProd	Scrap parts reported for the job.
18	TotTime	Integer	JobProd	Total time (run time plus down time) in seconds for the job.
19	WtTotTime	Float	JobProd	The "weighted" total time in seconds for the job.
20	DownTime	Integer	JobProd	Down time in seconds for the job.
21	WtDownTime	Float	JobProd	The "weighted" down time in seconds for the job.
22	NumDownTm	Integer	JobProd	The number of downtime occurrences for the job.
23	WtNumDown Tm	Float	JobProd	The "weighted" number of downtime occurrences for the job.
24	LaborTime	Integer	JobProd	Amount of labor time in seconds calculated for the job.
25	WtLaborTime	Float	JobProd	The "weighted" amount of labor time in seconds calculated for the job.
26	MinCycTm	Float	JobProd	Minimum cycle time value that occurred during the job.
27	MaxCycTm	Float	JobProd	Maximum cycle time value that occurred during the job.
28	SumCycTm	Float	JobProd	Sum of the cycle time values that occurred during the job. Useful in calculating the average for cycle time.
29	SumSqCycTm	Float	JobProd	Sum of the squares of the cycle time values that occurred during the job. Useful in calculating the standard deviation for cycle time.
30	NumCavs	Float	MoldIDs	The total cavities for the tool.
31	PctReg	Float	PartIDs	Percentage regrind of total for the material.
32	PcsPerCtn	Integer	PartIDs	Pieces per carton or box.
33	PartCost	Float	PartIDs	Part cost in \$ per unit.
34	MatlCost	Float	PartIDs	Material cost in \$ per unit.
35	Job Status	Alphanumeric (4)	JobQueue	The job's status, PEND (Pending), RUN (Running), SUSP (Suspended), or COMP (Completed).
35	ActCavs	Float	JobProd	The actual number of cavities used.

3.7 Process Sheet Data Export

The Process Sheet data export selection allows the user to export information about process sheets. This program can be useful for updating external systems with process parameter-related information from process sheets.

The following table describes the fields that are exported in the Process Sheet data export program:

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
1	MachID	Alphanumeric (6)	MachCon	The name of the Machine Number.
2	PartID	Alphanumeric (20)	PartIDs	The name of the Part Number.
3	MoldID	Alphanumeric (20)	MoldIDs	The name of the Tool Number.
4	SampID	Alphanumeric (18)	QCSheet	The name of the Sample ID.
5	Name	Alphanumeric (10)	ParmSet	The name of the Parameter.
6	ParmNo	Integer	PSEng	The zero-based parameter number.
7	UpperLim	Float	PSEng	The Engineering upper specification limit.
8	NomVal	Float	PSEng	The Engineering nominal value.
9	LowerLim	Float	PSEng	The Engineering lower specification limit.
10	ExpPctUp	Float	PSProd ¹	Standard percent uptime.
11	ExpCycTm	Float	PSProd	Standard cycle time.
12	ExpGood	Float	PSProd	Standard percent good parts.
13	HistPctUp	Float	PSProd	Historical percent uptime.
14	HistCycTm	Float	PSProd	Historical cycle time.
15	HistGood	Float	PSProd	Historical percent good parts.
16	LaborFactor	Float	PSProd	Standard labor factor.
17	LaborCost	Float	PSProd	Cost in \$ per unit time of an operator. Used as a multiplier of labor time to produce a cost of direct labor for a period of time.
18	NPL	Float	PsProd	Non-Production Limit, specified in seconds.

¹ Fields from the PSProd table do not vary as the process parameter (ParmNo field in PSEng database table) varies. They are included in this data export file to simplify the process of taking process sheet information to an external system.

3.8 Part ID Data Export

The Part ID data export selection allows the user to export information about parts. This program can be useful for updating external systems with information specific to a produced part or item.

The following table describes the fields that are exported in the Part ID data export program:

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
1	PartID	Alphanumeric (25)	PartIDs	The name of the Part Number.
2	PartDesc	Alphanumeric (50)	PartIDs	A description for the part.
3	PctReg	Float	PartIDs	Percent regrind of total material requirement.
4	PcsPerCtn	Integer	PartIDs	Pieces per container.
5	PartCost	Float	PartIDs	Part cost.
6	MatlCost	Float	PartIDs	Material cost.
7	MiscInfo1	Alphanumeric (30)	PartIDs	Part description 1.
8	MiscInfo2	Alphanumeric (30)	PartIDs	Part description 2.
9	PartInfo	Alphanumeric (40)	PartIDs	Part information.

3.9 Tool ID Data Export

The Tool ID data export selection allows the user to export information about tools. This program can be useful for updating external systems with information for a physical tool, mold, die, fixture, or other apparatus that is used in conjunction with a machine to produce a certain part or a group of parts.

The following table describes the fields that are exported in the Tool ID data export program:

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
1	MoldID	Alphanumeric (20)	MoldIDs	The name of the Tool Number.
2	MoldDesc	Alphanumeric (50)	MoldIDs	A description of the tool.
3	MachReq	Alphanumeric (20)	MoldIDs	User-defined description field for machine type.
4	NumCavs	Integer	MoldIDs	Total cavities for the tool.
5	Maker	Alphanumeric (20)	MoldIDs	User-defined description field for describing the tool's maker.
6	Location	Alphanumeric (20)	MoldIDs	User-defined description field for describing the tool's current location.
7	RunnerWt	Float	MoldIDs	Runner weight in grams. This value does <u>not</u> get converted to the display unit from System Configuration.
8	MiscInfo1	Alphanumeric (30)	MoldIDs	Tool description 1.
9	MiscInfo2	Alphanumeric (30)	MoldIDs	Tool description 2.
10	Setup Time	Integer	MoldIDs	The setup time in minutes for the tool.

3.10 Operator Tracking Data Export

The Operator Tracking data export selection allows the user to export information about all machine operators who have logged in for Operator Efficiency or Operator Tracking. This program can be useful for updating external time tracking systems.

The following table describes the fields that are exported in the Operator Tracking data export program:

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
1	OperatorID	Alphanumeric (18)	OperatorLogin	The Operator's ID.
2	MachID	Alphanumeric (6)	MachCon	The name of the Machine Number the operator logged in to.
3	LoginDate	Date	OperatorLogin	The login date.
4	LoginTime	Time	OperatorLogin	The login time in the format hh:mm.
5	LogoutDate	Date	OperatorLogin	The logout date. If the operator has not logged out yet, the value 0/0/0 will be used.
6	LogoutTime	Time	OperatorLogin	The logout time in the format hh:mm. If the operator has not logged out yet, the value 0:0 will be used.
7	ElapsedTime	Integer	OperatorLogin	The elapsed login time specified in seconds. If the operator has not logged out yet, the value 0 will be used.
8	Description	Alphanumeric (20)	OperatorLoginTr ansType	A description of the login type, usually "Operator Efficiency" or "Operator Tracking".

3.11 Schedule Summary Data Export

The Schedule Summary data export selection allows the user to export information about all currently scheduled jobs. It is identical in format to the report available from the scheduler application. However, the full prediction facilities of the scheduler are not available so the content of fields dealing with the future may not exactly match those of a Scheduler Summary Report.

The following table describes the fields that are exported in the Schedule Summary data export program:

#	FIELD	TYPE (LENGTH)	DB SOURCE	DESCRIPTION
1	MachineID	Alphanumeric (6)	MachCon	The name of the Machine Number.
2	DeptID	Alphanumeric (10)	Department	The name of the Department.
3	JobID	Alphanumeric (20)	JobQueue	The name of the Job Number.
4	FatherJobID	Alphanumeric (20)	FatherJobQueue	The name of the Father Job Number. Blank for bachelor jobs.
5	PartID	Alphanumeric (25)	PartIDs	The name of the Part Number.
6	MoldID	Alphanumeric (20)	MoldIds	The name of the Tool Number.
7	Status	Alphanumeric (4)	JobStatus	PEND, RUN, SUSP
8	Parts To Go	Integer	JobQueue, JobProd	Parts required to complete the job.
9	Hours To Go	Float	JobQueue, JobProd	Estimated time required to complete the job.
10	Desired Start Date	Date	JobQueue	User specified start date.
11	Desired Start Time	Time	JobQueue	User specified start time.
12	Desired End Date	Date	JobQueue	User specified end date.
13	Desired End Time	Time	JobQueue	User specified end time.
14	Forecasted Start Date	Date	JobQueue	This is set to the "actual" start date for a running job or the "desired" start date for a pending job.
15	Forecasted Start Time	Time	JobQueue	
16	Forecasted End Date	Date	JobQueue	This is calculated for running jobs and is the "desired" end date for pending jobs.
17	Forecasted End Time	Time	JobQueue	
18	Level Of Next	Integer	FutureJobs	Number indicating intended sequence.
19	Son Level Of Next	Integer	FutureJobs	Number indicating intended sequence.
20	Overdue Flag	Alphanumeric (1)		Always blank.

3.12 DTR Data Export

The DTR data export selection is an optional feature.

The DTR Data Export option for ProHelp® EPM allows the ProHelp® EPM system to be easily integrated with DTR Software International's *The Manufacturing Manager*™ (TMM) software. It allows ProHelp® EPM shift history data to be exported using the *TMM Standard* format (revised February 3, 1999).


4. Operation

Before executing Data Import, Data Export, or the DTR Data Export you must purchase the Data Import / Export option and/or the DTR Data Export option from Mattec Corporation. For additional information, please contact Mattec's Sales Department at (800) 966-1301.

To execute the Data Import / Export program, follow these steps:

- Install the ProHelp® EPM software on your computer.
- Click on the **Start Menu**.
- Select **Programs**.
- Select the **Mattec** folder.
- Select the **utilities** folder.
- Select the **Data Import / Export** program.

The Data Import / Export Wizard will be displayed:

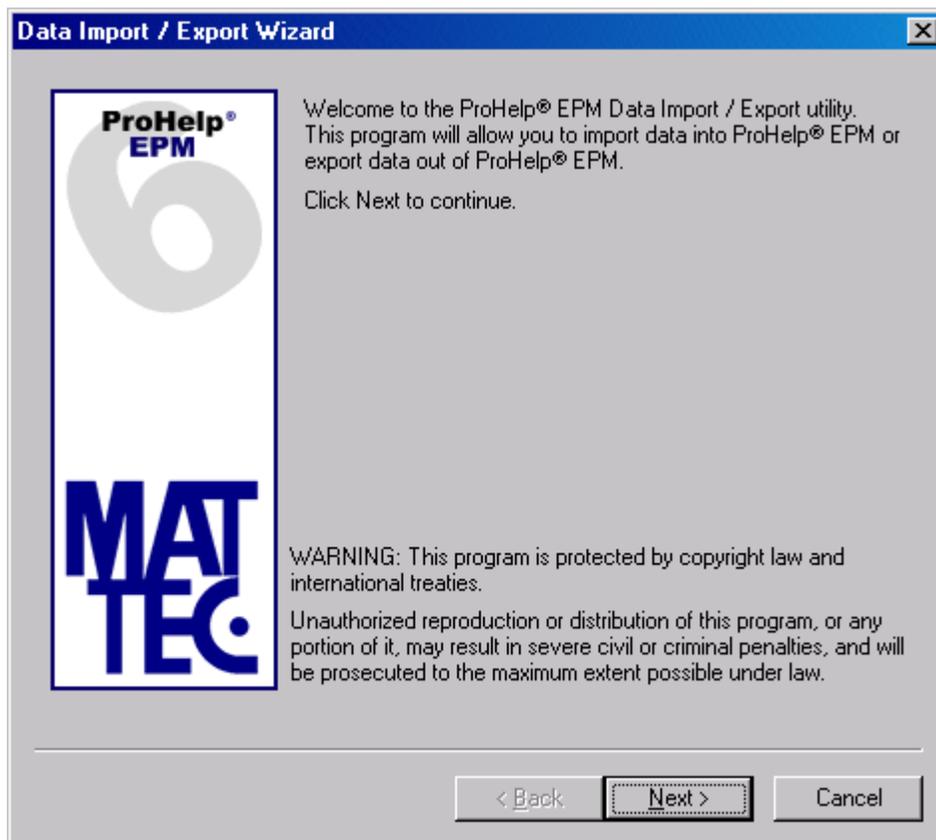

Follow the onscreen prompts as required. The status of the Data Import, Data Export, or DTR Data Export will be shown, as appropriate.

5. Automatic Execution

The Data Import/Export program is used to import data into the ProHelp® EPM system or export data out of the ProHelp® EPM system.

The Data Import/Export program is typically located in the installation “bin” directory, for example “C:\Program Files\Mattec\ProHelp\Bin” and is named “DataImportExport.exe”.

The Data Import/Export program may be executed using command line parameters. This permits the program to be scheduled to run automatically via the Scheduled Tasks Wizard (Accessories -> System Tools -> Scheduled Tasks) that is included with Microsoft Windows 2000. Reference the Microsoft documentation that came with your ProHelp® EPM system for additional information.

5.1 Automatically Run Data Import

The Data Import/Export program may be executed from the command line without user interaction. This allows an *advanced* ProHelp® EPM user to automatically execute the Data Import/Export program and instruct the program to perform an “import” to update the ProHelp® EPM database.

To run the Data Import/Export program from the command line to perform an “import”, follow this syntax:

```
DataImportExport.exe -auto -import -file:FILE_TO_BE_IMPORTED [options]
```

where “DataImportExport.exe” is the name of the Data Import/Export program, “-auto”, “-import” and “-file:” are required and must be entered exactly as shown, and “FILE_TO_BE_IMPORTED” should be replaced with the full path name of the data file to be imported.

The following table describes the command line syntax for the Data Import/Export program:

Description	Default	Allowable Values
System Number		<i>xxx</i> The system number (as defined by the System Names Edit program). <i>xxx</i> is a number that may not be preceded by a “-“ and must be the first command line option that is specified. This field is optional unless more than one system is defined in System Names Edit.

Description	Default	Allowable Values
Automatic execution		-auto Indicates that the Data Import/Export program will be run using command line arguments. Failure to specify this option will cause the program to be run interactively.
Data Import	-import	-import Indicates that the Data Import/Export program will be importing data. -export Indicates that the Data Import/Export program will be exporting data. Reference Section 5.2 for additional information.
File to be imported		-file:" <i>FILE_TO_BE_IMPORTED</i> " The name of the data file to be imported. You must replace <i>FILE_TO_BE_IMPORTED</i> with the full path name of the data file to be imported.
Import file disposition	-nodelete	-delete Always delete the data file. -nodelete Never delete the data file. -delnoerr Delete the data file only if no errors were encountered during processing.
Error logging		-error: <i>ERROR_FILE_NAME</i> The name of the error file. This value is optional. If you do not specify an error file, the value "C:\DataImportExportError.txt" will be used.

5.2 Automatically Run Data Export

The Data Import/Export program may be executed from the command line without user interaction. This allows an *advanced* ProHelp® EPM user to automatically execute the Data Import/Export program and instruct the program to perform an “export” of data from the ProHelp® EPM database.

To run the Data Import/Export program from the command line to perform an “export”, follow this syntax:

```
DataImportExport.exe -auto -export -type -file:FILE_TO_BE_EXPORTED
[options]
```

where “DataImportExport.exe” is the name of the Data Import/Export program, “-auto”, “-export”, and “-file:” are required and must be entered exactly as shown, “-type” is the type of data export to be performed (e.g., “-prod”), and “FILE_TO_BE_EXPORTED” should be replaced with the full path name of the data file that will be created.

The following table describes the command line syntax for the Data Import/Export program:

Description	Default	Allowable Values
System Number		<p><i>xxx</i></p> <p>The system number (as defined by the System Names Edit program). <i>xxx</i> is a number that may not be preceded by a “-” and must be the first command line option that is specified.</p> <p>This field is optional unless more than one system is defined in System Names Edit.</p>
Automatic execution		<p>-auto</p> <p>Indicates that the Data Import/Export program will be run using command line arguments. Failure to specify this option will cause the program to be run interactively.</p>
Data Import	-import	<p>-import</p> <p>Indicates that the Data Import/Export program will be importing data. Reference Section 5.1 for additional information.</p> <p>-export</p> <p>Indicates that the Data Import/Export program will be exporting data.</p>
File to be exported		<p>-file:”<i>FILE_TO_BE_EXPORTED</i>”</p> <p>The name of the data file to be created. You must replace <i>FILE_TO_BE_EXPORTED</i> with the full path name of the data file to be exported.</p>

Description	Default	Allowable Values
Export type (Note 3)		-prod Production history export. -spc SPC history export. -job Job descriptor export. -process Process Sheet export. -part Part ID export. -tool Tool ID export. -operator Operator history export. -dtr DTR Data Export. -schedule Schedule Summary Report
Quoted text	-noquoted	-noquoted Text fields are exported without quotes. -quoted Text fields are exported with double quotes.
Fixed-length text	-nofixed	-nofixed Text fields are variable-length. -fixed Text fields are a fixed-length and padded with spaces.
Encoding	-unicode	-ascii ASCII text format. -unicode Unicode text format.
Department (Note 1)	All	-deptno:xxx The internal DeptNo of the department to export, where xxx is a number between 1 and 99.
Start date (Note 1)	-startdate:0 (current day)	-startdate:xxx Where xxx is zero or a negative number relative to today (e.g., “-startdate:-1” instructs the program to start one day before today).
End date (Note 1, 2)	-enddate:0 (current day)	-enddate:xxx Where xxx is zero or a negative number relative to today (e.g., “-enddate:-1” instructs the program to end one day before today).

Description	Default	Allowable Values
Shift Index (Note 1, 2)	All	-shift:xxx The shift index for the data to be exported, where xxx is the specific shift index. The first shift of the production day is 1. Values can range from 1-10.
Error logging		-error: <i>ERROR_FILE_NAME</i> The name of the error file. This value is optional. If you do not specify an error file, the value “C:\DataImportExportError.txt” will be used.

Note 1: The department (-deptno), start date (-startdate), and end date (-enddate) or shift index (-shift) are available for the Production history export (-prod), the Operator history export (-operator), and the DTR Data Export (-dtr).

The department (-deptno), start date (-startdate), and end date (-enddate), but not the shift index (-shift), are available for the SPC history export (-spc).

Note 2: The optional settings for end date (-enddate) and shift index (-shift) may not be used together. Both of these settings combine with the setting for start date (-startdate) to limit the amount of data that will be exported.

Note 3: Some additional types may be supported to allow data to be exported in an older format. See section 7 for a list of these types.

5.3 Automatically Run Real-Time Display HTML Export

Any Real-Time Display can be exported as an HTML file for viewing with a web browser. This feature can only be accessed from the command line and is not available when the Data Import/Export program is run interactively.

To run the Data Import/Export program from the command line to perform a Real-Time Display HTML Export, follow this syntax:

```
DataImportExport.exe -auto -export -realtime
  -displayno:REAL_TIME_DISPLAY_NUMBER -file:FILE_TO_BE_EXPORTED [options]
```

where “DataImportExport.exe” is the name of the Data Import/Export program, “-auto”, “-export”, “-realtime”, “-displayno:”, and “-file:” are required and must be entered exactly as shown, “REAL_TIME_DISPLAY_NUMBER” should be replaced with the number of the desired display as shown on the Real-Time Display Writer screen, and “FILE_TO_BE_EXPORTED” should be replaced with the full path name of the data file that will be created.

The following table describes the command line syntax for Real-Time Display HTML Export using the Data Import/Export program:

Description	Default	Allowable Values
System Number		Xxx The system number (as defined by the System Names Edit program). xxx is a number that may not be preceded by a “-” and must be the first command line option that is specified. This field is optional unless more than one system is defined in System Names Edit.
Automatic execution		-auto Indicates that the Data Import/Export program will be run using command line arguments. Failure to specify this option will cause the program to be run interactively.
Data direction		-export Indicates that the Data Import/Export program will be exporting data.
Type		-realtime Indicates that the Data Import/Export program will be exporting a Real-Time display.

Description	Default	Allowable Values
Display number		-file:" <i>REAL_TIME_DISPLAY_NUMBER</i> " The internal numeric identifier of the display. This number is shown on the Real-Time Display Writer screen. You must replace <i>REAL_TIME_DISPLAY_NUMBER</i> with this number.
File to be exported		-displayno:" <i>FILE_TO_BE_EXPORTED</i> " The name of the data file to be created. You must replace <i>FILE_TO_BE_EXPORTED</i> with the full path name of the data file to be exported.
Refresh		-refresh: <i>xxx</i> Where <i>xxx</i> is the desired refresh interval in seconds. This number is placed in the HTML file to indicate to the browser how often it should refresh its display. Rerunning the export operation refreshes the data that is displayed.
Department	All	-deptno: <i>xxx</i> The internal DeptNo of the department to export, where <i>xxx</i> is a number between 1 and 99.

5.4 Automatically Run System Reports

The System Reports program may be executed from the command line without user interaction. This allows an *advanced* ProHelp® EPM user to automatically execute the System Reports program and instruct the program to run a specific report and copy the report data to a file or to print the report.

To run the System Reports program from the command line, follow this syntax:

```
SystemReports.exe -auto -report:REPORT_FILE_NAME -error:ERROR_FILE
[-output:OUTPUT_FILE_NAME] [-type:OUTPUT_TYPE] [-print] [options]
```

where “SystemReports.exe” is the name of the SystemReports program and “-auto” is required and must be entered exactly as shown.

The following table describes the command line syntax for the System Reports program:

Description	Default	Allowable Values
System Number		<p><i>xxx</i></p> <p>The system number (as defined by the System Names Edit program). <i>xxx</i> is a number that may not be preceded by a “-” and must be the first command line option that is specified.</p> <p>This field is optional unless more than one system is defined in System Names Edit.</p>
Automatic execution		<p>-auto</p> <p>Indicates that the System Reports program will be run using command line arguments. Failure to specify this option will cause the program to be run interactively.</p>
Report to execute		<p>-report:”<i>REPORT_FILE_NAME</i>”</p> <p>The name of the report file to be executed, <u>without the .RPT extension</u> (e.g. “-report:DailyProd”).</p>
Error logging		<p>-error:<i>ERROR_FILE_NAME</i></p> <p>The name of the error file. This value is optional. If you do not specify an error file, the value “C:\AutoReport.txt” will be used.</p>
Output File Name		<p>-output:<i>OUTPUT_FILE_NAME</i></p> <p>The name of the output file. This value is optional if you are printing the report.</p>

Description	Default	Allowable Values
Output type		-type:commaseparated Comma-separated file format. -type:tabseparated Tab-separated file format. -type:charseparated Character-separated file format. -type:excel97 Microsoft Excel 97 format. -type:pdf PDF format. -type:word Microsoft Word for Windows format.
Print output		-print Causes the report output to be printed to the default printer. If a default printer is not defined, the report will not be printed.
Start date (Note 1)		-startdate:xxx Where xxx is zero or a negative number relative to today (e.g., “-startdate:-1” instructs the report to start one day before today).
End date (Note 1)		-enddate:xxx Where xxx is zero or a negative number relative to today (e.g., “-enddate:-1” instructs the report to end one day before today).
PM Due Date (Note 2)		-pmdueby:xxx Where xxx is zero or a positive number relative to today (e.g., “-pmdueby:7” instructs the report to display all preventive maintenance that is due in the next 7 days).
Running Jobs Only (Note 3)		-runningjobonly Causes the report to be generated for running jobs only.
Job Start Date (Note 3)		-jobstart:xxx Where xxx is zero or a negative number relative to today (e.g., “-jobstart:-2” instructs the report to include all jobs that ran anytime where their start date was 2 days before today.)
Job End Date (Note 3)		-jobend:xxx Where xxx is zero or a negative number relative to today (e.g., “-jobend:-1” instructs the report to include all jobs that ran anytime where their end date was 1 day before today.)

Description	Default	Allowable Values
Where Clause		-where:xxx Where xxx is any valid “where clause” that can be used with the report to limit data that will be displayed (e.g., ‘-where:”MachNo=3 OR MachNo=4’” instructs the report to display data for MachNo’s 3 and 4.

Note 1: The start date (-startdate) and end date (-enddate) are available for reports that include a ShiftSeq, such as the “Daily Production Report”.

Note 2: The PM Due Date (-pmduedate) is available for the “Machine PM Due Report” or the “Tool PM Due Report”.

Note 3: The running jobs only flag (-runningjobonly), job start date (-jobstart), and job end date (-jobend) are only available for “Job” reports that include the Status, StartTime, and StopTime fields, such as the “Job Production Report”.

6. Direct Database Operation (Advanced Users Only)

As noted in Section 1.1.2, it is a violation of Mattec's copyright to use the Data Import / Export program, DTR Data Export program, database stored procedures, database views, or other related utilities without purchasing the Data Import / Export option or the DTR Data Export option, as appropriate, from Mattec Corporation.

However, if you have purchased the Data Import / Export option or DTR Data Export option, a very knowledgeable database administrator could call the related stored procedures and views to create a sophisticated and/or automated interface between ProHelp® EPM and your ERP system.

Before implementing an advanced interface, it's important to note that the stored procedures and views are subject to change without notice.

6.1 Exporting Data Using Views (Advanced Users Only)

Mattec utilizes database views to extract data from the database for the purpose of exporting it to external systems. The Data Import / Export program calls the appropriate views to extract data, processes that data, then writes the processed data to an ASCII text file.

It's possible for a knowledgeable database administrator to use these same views to create a sophisticated and/or automated interface between ProHelp® EPM and your ERP system, without the need to create an intermediate ASCII text file.

Following is a brief description of the database views that are used by the Data Import / Export program. For the exact format of data that is extracted, refer to the actual views.

DATABASE VIEW	DESCRIPTION
vExportShiftProd	Provides shift history information. This view is used by the "Production History" export option. These fields are described in Section 3.4.
vExportLongTermSPC	Provides data related to long-term (automatic) SPC history. This view is used by the "SPC History" export option. These fields are described in Section 3.5.
vExportJob	Provides data related to any job that has run. Used by the "Job History" export option. These fields are described in Section 3.6.
vExportProcessSheet	Provides data stored in Process Sheets. This view is used by the "Process Sheets" export option. These fields are described in Section 3.7.
vExportPartID	Provides data stored in Part IDs. This view is used by the "Part IDs" export option. These fields are described in Section 3.8.
vExportToolID	Provides data stored in Tool IDs. This view is used by the "Tool IDs" export option. These fields are described in Section 3.9.
vExportOperatorLogin	Provides data related to operator logins. This view is used by the "Operator Tracking" export option. These fields are described in Section 3.10.

Examples:

```
SELECT * FROM vExportJob

SELECT * FROM vExportShiftProd
WHERE ShiftSeq >= 200108180 AND
      ShiftSeq <= 200108189
```

6.2 Importing Data Using Stored Procedures (Advanced Users Only)

Mattec utilizes database stored procedures to import data into the database. The Data Import / Export program reads an ASCII text file, processes that data, then calls the appropriate stored procedures using that processed data to create or update the appropriate database records.

It's possible for a knowledgeable database administrator to use these same stored procedures to create a sophisticated and/or automated interface between ProHelp® EPM and your ERP system, without the need to create an intermediate ASCII text file.

Following is a brief description of the database stored procedures that are used by the Data Import / Export program. For the exact arguments that are required, refer to the actual stored procedures.

DATABASE STORED PROCEDURE	DESCRIPTION
pImportAppendJobToSchedule	Schedules an existing, unscheduled job. The job must exist in the Job Descriptor table. This stored procedure is used by the "Create or Append to Machine Schedule (SA)" action request in Section 2.9.
pImportJob	Use to create a new job and place it in the Job Descriptor table or to update an existing job. This stored procedure is used by the "Create or Modify a Job Descriptor (JB)" action request in Section 2.6.
pImportPart	Used to create or modify a Part ID. This stored procedure is used by the "Create or Modify a Part ID (PI)" action request in Section 2.3.
pImportPSEng (*)	Used to create or modify the process-specific information for a Process Sheet. This stored procedure is used by the "Create or Modify a Process Sheet (Process-specific Information) (PE)" action request in Section 2.5.
pImportPSProd (*)	Used to create or modify the basic information for a Process Sheet. This stored procedure is used by the "Create of Modify a Process Sheet (Basic Information) (PP)" action request in Section 2.4.
pImportScheduleDelete	Used to delete a machine's schedule. This stored procedure is used by the "Delete a Machine Schedule (SD)" action request in Section 2.7.
pImportTool	Used to create or modify a Tool ID. This stored procedure is used by the "Create of Modify a Tool ID (TI)" action request in Section 2.2.

* - If the pImportPSEng and pImportPSProd stored procedures are not done properly, the user will not be able to edit the Process Sheet via Edit Facilities. The Process Sheet record must be corrected manually (using pImportPSEng and pImportPSProd) before Edit Facilities will work properly (for this Process Sheet). Reference Section 2.5 for additional information.

Examples:

```
pImportJob 'Job1', 'Mach1', 'Tool1', 'Part1', 998111111, 1009300000, 1000, 998111111,  
cust1, comment1, c2
```

```
pImportScheduleDelete 'Mach1'
```

```
pImportAppendToSchedule 'Job1', 'Mach1'
```

Note: There are other database stored procedures that have the name **pImportXXX**. Many of those stored procedures are used by the Data Conversion program and are not appropriate for use when importing data from an external ERP system.

6.3 Sample Programs (Advanced Users Only)

A knowledgeable user could create a custom stored procedure to import data directly into ProHelp® EPM from a third-party system and/or to export data from ProHelp® EPM to a third-party system. This stored procedure could then be scheduled to run automatically (using the SQL Server agent). This stored procedure could also execute without the need for an intermediate ASCII text file.

Before connecting to an external database system, it may be necessary to add a “New SQL Server Registration” to the external system on the ProHelp® EPM server. Similarly, it may be necessary to execute the following in the SQL Server Query Analyzer:

```
sp_addlinkedserver MYSERVER
```

Where *MYSERVER* is the name of an external database server. This command only needs to be executed one time.

Reference the SQL Server documentation that came with your system for additional information.

6.3.1 Example 1 – Data Import

Assume the following sample stored procedure exists in the same database as ProHelp® EPM. It will extract a machine schedule from an external system (computer “MYSERVER”, database “MYDATABASE”, table “MyTable”) and import the schedule into ProHelp® EPM using the pImportAppendToSchedule stored procedure.

```
CREATE PROCEDURE SampleCustomDataImport AS
BEGIN

    DECLARE @varJobID VARCHAR(18)
    DECLARE @varMachID VARCHAR(5)

    /* Create a cursor to hold the data from the external system */
    DECLARE JobListCursor CURSOR FOR
        SELECT JobId, MachId FROM MYSERVER.MYDATABASE.dbo.MyTable

    /* Open the cursor */
    OPEN JobListCursor

    /* Loop through the job list cursor */
    FETCH JobListCursor INTO @varJobID, @varMachID
    WHILE (@@fetch_status >= 0)
    BEGIN

        /* Add the Job to ProHelp EPM's schedule */
        EXEC pImportAppendJobToSchedule @varJobId, @varMachId

        /* Fetch the next row from the cursor */
        FETCH JobListCursor INTO @varMachId, @varJobID

    END

    /* Clean Up */
    DEALLOCATE JobListCursor

END
```

For your convenience, the above stored procedure actually exists in the MATTEC_PROHELP database on your ProHelp® EPM system.

6.3.2 Example 2 – Data Export

Assume the user wishes to select Production History data from ProHelp® EPM and insert the data into an external system. The user could select the data by executing the following:

```
SELECT * FROM vExportShiftProd
```

The SQL statement above will select all Production History data that is stored online. To limit this data to a single day, you could execute the following:

```
SELECT * FROM vExportShiftProd
WHERE ShiftSeq >= 200108180 AND
      ShiftSeq <= 200108189
```

In the example above, you'll notice that the ShiftSeq (Shift Sequence Number) 200108180 is used as a starting point and 200108189 is used as an ending point. The first 8 digits of the ShiftSeq represent the date in YYYYMMDD format. In this particular example, year = 2001, month = 08, and day = 18. The last digit of the ShiftSeq represents the shift number, where 0 is the first shift number in a day and 9 is the last possible shift number in a day.

To set variables equal to today's first ShiftSeq and today's last ShiftSeq, you could execute the following:

```
DECLARE @StartingShiftSeq CHAR(9)
DECLARE @EndingShiftSeq CHAR(9)

/* Set the StartingShiftSeq to today */
SET @StartingShiftSeq = (SELECT datepart(year, getdate()) * 100000
                        + datepart(month, getdate()) * 1000
                        + datepart(day, getdate()) * 10
                        + '0')

SET @EndingShiftSeq = (SELECT datepart(year, getdate()) * 100000
                       + datepart(month, getdate()) * 1000
                       + datepart(day, getdate()) * 10
                       + '9')
```

Again, recall that '0' is the first shift number of the day and '9' is the last shift number of the day.

However, you are probably more interested in determining yesterday's first ShiftSeq and yesterday's last ShiftSeq. To do that, execute the following:

```
SET @StartingShiftSeq = (SELECT datepart(year, dateadd(day, -1, getdate())) * 100000
                        + datepart(month, dateadd(day, -1, getdate())) * 1000
                        + datepart(day, dateadd(day, -1, getdate())) * 10
                        + '0')
```

```
SET @EndingShiftSeq = (SELECT datepart(year, dateadd(day, -1, getdate())) * 100000
                        + datepart(month, dateadd(day, -1, getdate())) * 1000
                        + datepart(day, dateadd(day, -1, getdate())) * 10
                        + '9')
```

In the example above, you'll notice that we use the `dateadd` function to subtract 1 from today in order to determine the date for "yesterday".

Finally, we are ready to consider a simple example.

Assume the following sample stored procedure exists in the same database as ProHelp® EPM. It will extract Production History data from yesterday and copy the data to an external system (computer “MYSERVER”, database “MYDATABASE”, table “MyOtherTable”, fields “MyMachNo”, “MyJobId”, “MyShiftSeq”, and “MyProdQty”).

```

CREATE PROCEDURE SampleCustomDataExport AS
BEGIN

    /* Declare variables for the starting ShiftSeq and the ending ShiftSeq */
    DECLARE @StartingShiftSeq CHAR(9)
    DECLARE @EndingShiftSeq CHAR(9)

    /* Determine the first ShiftSeq for "yesterday" */
    SET @StartingShiftSeq = (SELECT datepart(year, dateadd(day, -1, getdate())) * 100000
                            + datepart(month, dateadd(day, -1, getdate())) * 1000
                            + datepart(day, dateadd(day, -1, getdate())) * 10
                            + '0')

    /* Determine the last ShiftSeq for "yesterday" */
    SET @EndingShiftSeq = (SELECT datepart(year, dateadd(day, -1, getdate())) * 100000
                            + datepart(month, dateadd(day, -1, getdate())) * 1000
                            + datepart(day, dateadd(day, -1, getdate())) * 10
                            + '9')

    /* Select the Production History data from ProHelp EPM and write */
    /* it to a table in an external system */
    INSERT INTO MYSERVER.MYDATABASE.dbo.MyOtherTable(MyMachNo,
                                                    MyJobID,
                                                    MyShiftSeq,
                                                    MyProductionQty)

    SELECT MachId, JobId, ShiftSeq, CalProdQty
    FROM vExportShiftProd
    WHERE ShiftSeq >= @StartingShiftSeq AND
           ShiftSeq <= @EndingShiftSeq

END

```

In the example above, you’ll notice that the data is selected from ProHelp® EPM (the last **SELECT** statement) and copied to the external system (the **INSERT** statement) as a single command.

For your convenience, the above stored procedure actually exists in the MATTEC_PROHELP database on your ProHelp® EPM system.

7. Compatibility With Older Releases Of Software

The format for Data Import or Data Export records frequently changes with each new release of ProHelp® EPM. However, the program is sometimes capable of importing data or exporting data in the same format that was used in a prior release.

Advanced Tip #1

The Data Import request codes and Data Export types listed in this section are obsolete. They are not guaranteed to work in future versions of software.

If you are creating a new Data Import or Data Export interface to ProHelp® EPM, you should use the current versions of these requests.

The following table lists obsolete data import request codes that continue to work in the current version of software:

Data Import Type	Request Code	Description
Tool ID	“TI”	“Create or Modify a Tool ID” request code that is compatible with Release 6.2.0.
Process Sheet	“PP”	“Create or modify a Process Sheet (basic information)” request code that is compatible with Release 6.2.2.
Process Sheet	“PE”	“Create or modify a Process Sheet (process-specific information)” request code that is compatible with Release 6.2.2.
Part ID	“PI”	“Create or Modify a Part ID” request code that is compatible with Release 6.2.0.
Job Descriptor	“JB”	Create or modify a Job Descriptor request code that is compatible with Release 6.2.0.
Job Descriptor	“JF”	Create or modify a Father Job Descriptor request code that is compatible with Release 6.2.0.
Machine Schedule	“SD”	Delete a Machine Schedule request code that is compatible with Release 6.2.0.
Machine Schedule	“SA”	Create or append to a Machine Schedule request code that is compatible with Release 6.2.0.

The following table lists obsolete data export types that continue to work in the current version of software:

Data Export Type	Export Type	Description
Shift History Export	-prod620	“Production History Data Export” that is compatible with Release 6.2.0
Shift History Export	-prod760	“Production History Data Export” that is compatible with Release 7.6.0
Job descriptor export.	-job620	“Job Descriptor Data Export” that is compatible with Release 6.2.0
Part ID export.	-part620	“Part ID Export” that is compatible with Release 6.2.0
Tool ID export.	-tool620	“Tool ID” that is compatible with Release 6.2.0