



10X 98' FLOPPY FILE TRANSFER PROGRAM

.....

1. Turn off power to the MIU.
2. Connect floppy ribbon cable and power cable to motherboard with disk inserted. See following highlighted areas for connections of the ribbon and power cables.

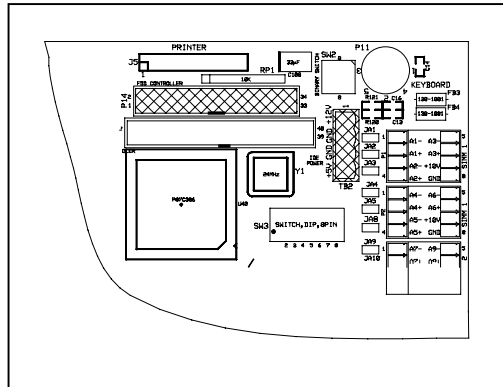

3. Move JX12A to the floppy position. If JX12A is a shunt move to the left two pins if it is a switch slide it to the left.

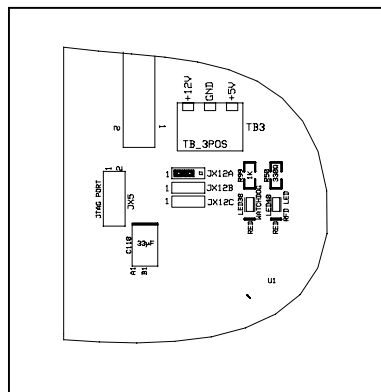

4. Power up MIU.
5. When LCD screen indicates transfer complete - repower MIU without floppy connected and replace JX12A to cover the right two pins or slide the switch back right.
6. If the MIU does not boot from the floppy the BIOS may need to be reset. Reset the bios by slightly lifting the contact tab on the battery B1 for 2 seconds. **CAUTION**, only lift the tab enough to break contact with the battery.